

Inspection of Master Link and Components instructions

Bent, nicked, worn or elongated components

Severe corrosion

Scouring and cracks

Make sure that the all functions are fully operable.

The wear on the master link shall in no place exceed 10% of the original dimensions.

The wear is defined as the reduction of the mean diameter measured in two directions perpendicular to each other.